



Table of Contents

1.	Hardware	.3
	Hardware Connection	.3
	Connecting Touch Panel (Optional)	
	Connection Diagram.	
	DIP Switch Settings	
	36 & 10 PIN Button Layout.	
	Solving Ticket SSR Error	
	Reset	
	Neset	. 1
2	Bookkeeping & Adjustment1	ın
2.		
	Access Flow Chart	
	System Settings	
	Chance Settings	
	Touch Screen Calibration.	12
3.	Introduction1	13
	Common Features	13
	Lobby	13
4.	(Game 1) Sherwood Forest1	14
	Main Game	14
	Feature	
	Bonus Game.	
	Free Game	
	Double Game	
	Win Rules	
	Odds Table	
	Line Chart	
5.	(Game 2) Hercules2	21
	Main Game	
	Feature	
	Scatter Game	
	Bonus Game	
	Mission: Lernaean Hydra	
	Free Game	
	TICO Game	

Venus Help	
Double Game	26
Win Rules	27
Encouraging Higher Play	27
Odds Table	27
Line Chart	28



1. Hardware


Hardware Connection



A. RS-232

Connects to optional Citizen printer/licket dispenser.

* Use Belkin #F2L044 (serial printer cable/hull modern) for Citizen printer.

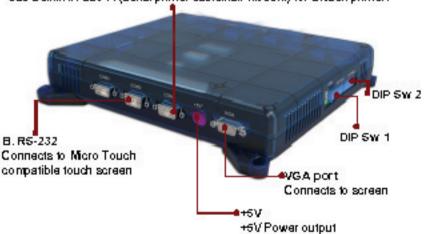


Connecting Touch Panel (Optional)

Type A



- Refer to the diagram below to connect the touch screen.
- After the connection, remember to adjust the Pin 1 of DIP SW2 to ON to enable touch mode.

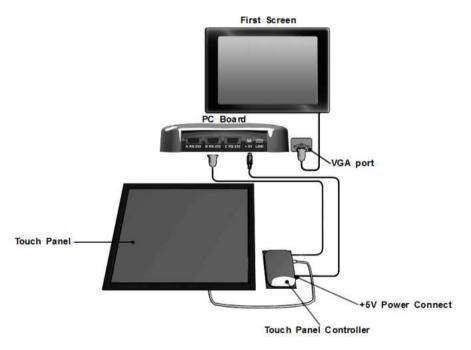



Connection Diagram

36 Pins (6 Buttons)					
PARTS SIDE		SOLDER SIDE			
	1				
SPEAKER_R	2				
SPEAKER_L	3	GND			
	4				
	5				
	6				
TICKET OUT	7				
TICKET SWITCH	8				
START / ALL STOP	9				
STOP4/SMALL/HELP	10				
STOP5/PLAY	11				
STOP1/TAKE/ MENU	12				
STOP3/DOUBLE/SELECT LINE	13				
	14				
	15				
STOP2/BIG/HOLD PAIR	16				
	17				
COIN A	18	KEY IN			
	19	COIN C			
RECORD	20	TEST			
	21	KEY OUT/PRINTER OUT			
	22				
COIN A METER	23				
KEY IN METER	24				
	25				
COIN C METER	26				
OUT METER	27				
OUT WILTER	28				
LAMP: START/ALL STOP	29				
LAMP: STOP4/SMALL/HELP	30				
LAMP: STOP5/PLAY	31	LAMP: COUNT			
LAMP: STOP1/TAKE/MENU	32				
LAMP: STOP3/DOUBLE/SELECT LINE	33				
LAMP: STOP2/BIG/HOLD PAIR	34				
	35				
GND	36	GND			

10 Pins (6 Buttons)					
PARTS SIDE		SOLDER SIDE			
GND	1	GND			
GND	2	GND			
+5V	3	+5V			
+5V	4	+5V			
+12V	5	+12V			
HOP-VCC	6				
TICKET SSR	7				
	8				
GND	9	GND			
GND	10	GND			

DIP Switch Settings

DIP SW ITC	H 2	1	2	3	4	5	6	7	8
TOUCH	NO	OFF							
100011	YES	ON							

36 & 10 PIN Button Layout

6 Buttons

TAKE STOP1 MENU

BIG STOP 2 (HOLD) DOUBLE STOP 3 (SELECT LINE)

SM ALL STOP 4 (HELP) PLAY STOP5 START ALL STOP TAKE

Solving Ticket SSR Error

After powering on the machine, if the ticket dispenser keeps working and can't be stopped, it could be that the Ticket SSR's jump setting is incorrect.

How to solve:

1. Locate the Ticket SSR jump (JP5) on the PC board. Then identify current **TICKET SSR** is at **HIGH ACTIVE** or **LOW ACTIVE**.



2. Change to use the alternative JP5 setting.

IDE	Low Active	3 2 1	Short pins 1-2
31-3	High Active (Default)	3 2 1	Short pins 2-3



Reset

- 1. Power off the machine and then power on.
- Press and hold the 【TEST】 button until the game enters the CHECKING SYSTEM page.
- 3. Enterthe TEST page.



4. Press the [PLAY] button to enter the TEST 2 PAGE (PAGE 2).



5. Press the **[STOP3]** button to enter the **FRESET** page.



6. Press the [PLAY] button to RESET the game to default value.






7. Press the **[PLAY]** button again to confirm **RESET** or press **ANY** button to EXIT.



- 8. After **RESET** is completed, it displays **SYSTEM RESET COMPLETED** on the screen.
- 9. Power off the machine and then power on to complete the Reset procedure.

2. Bookkeeping & Adjustment

Access Flow Chart

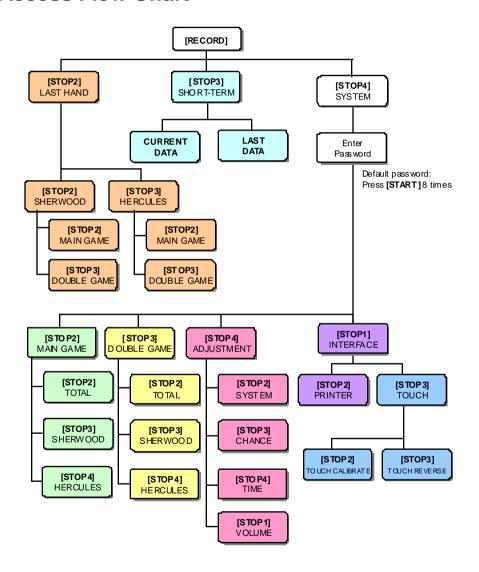

LEGENDARY TRIO


System Settings

ITEMS	SETTING SELECTION	DEFAULT
MAX. LINE PLAY	2, 4, 8, 10, 15, 20	20
MIN. PLAY(TOTAL)	1, 5, 10, 15, 25, 50, 75, 100, 125, 150	25
MIN. PLAY FOR JACKPOT	1, 5, 10, 15, 25	25
JACKPOT MAX	15000, 20000, 50000, 70000, 100000, 150000, 200000	50000
COIN RATE		25
KEY IN RATE	1 5 10 20 25 50 75 100 200 500 1000	100
KEY OUT RATE	1, 5, 10, 20, 25, 50, 75, 100, 200, 500, 1000	100
TICKET RATE		500
GAME TICKET	1, 2, 3, 4, 5, 8, 10, CONTINUOUS	CONTINUOUS
INTERFACE	DISPENSER, PRINTER, ATTENDANT	PRINTER
PRINTER COMMAND	CBM1, ESC/POS, ESC/POS2, STAR	CBM1
DISPLAY	CREDIT, 1C, 5C, 10C, 20C, 25C, 50C, \$1	CREDIT
SYSTEM LIMIT	NO, YES	NO
AUTO TICKET	NO, YES	NO
DEMO MUSIC	NO, YES	YES
NON-STOP	NO, YES	NO
PASSWORD	NO, YES	NO
ODDS TABLE	NO, YES	YES
SCORE BOX	NO, YES, 10X	NO
PLAY SCORE	NO, YES	YES
HAND COUNT	NO, YES	NO
HOLD PLAY	NO, YES	YES
AUTO PLAY	NO, YES	YES
DOUBLE GAME	NO, YES	YES
JACKPOT MODE	PROGRESSIVE, RANDOM	PROGRESSIVE

Chance Settings

ITEMS	SETTING SELECTION	DEFAULT
MAIN GAME LEVEL	LEVEL1(Easiest), LEVEL2,LEVEL3, LEVEL4,LEVEL5,LEVEL6(Hardest)	LEVEL 6
DOUBLE GAME LEVEL	85%, 90%, 95%	95%

Touch Screen Calibration

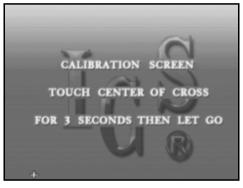

- If a touch screen is connected, press [RECORD]> [SYSTEM]>[INTERFACE]> [TOUCH] and follow the on-screen prompts to enter the calibration screen.
- 2. Touch center of the cross on the screen for 3 seconds.
- 3. Follow the cross when it moves till the calibration is completed.




3. Introduction

Common Features

- Max. Win up to 500,000.
- Touch screen / Auto play support.

Lobby

Legendary Trio is a 3 in 1 multigame.

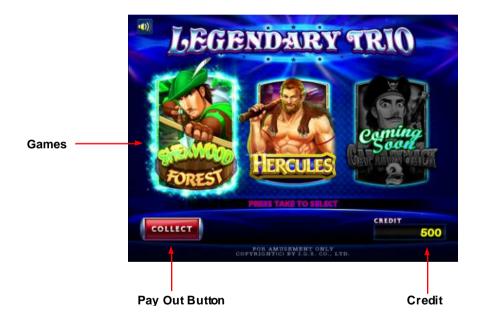

4. (Game 1) Sherwood Forest



Main Game

- Sherwood Forest is a 5 Reels & 25 Liners game.
- After collecting winning values, the winning symbols will be deared with new symbols dropped above to fill all empty spaces, and then re-collect again if there is a win. A game repeats this feature until there is no winning combination.

LEGENDARY TRIO

Feature

Golden Arrow



When the Golden Arrow appears on the 5th reel, the symbols shot by Robin Hood will be replaced with WILD symbols to increase the winning possibility.





Bonus Game



- 3 SCATTER symbols appear in a game to trigger 「Archery Bonus Game」
- Pick a money bag to shoot and win either prizes or multiplier
- The Bonus Game ends when "Exit" has been picked

LEGENDARY TRIO

Free Game





- 3 SCATTER symbols appear in a game to trigger Free Game and 10 free games will be awarded.
- The winning times will be accumulated in each free game. When the accumulated times reach the following terms, the designated symbols will become WILD symbols in a game to increase the winning possibility.

- The first winning time will turn the Robin Hood symbols in a game into WILD symbols.
- 3 consecutive winning times will turn the Little John symbols in a game into WILD symbols.
- 6 consecutive winning times will turn the Friar Tuck symbols in a game into WILD symbols.

Double Game



- After winning in a game, a player can press [DOUBLE] button to play Double Game.
- Press [START] button to select Robin Hood or Noble.
- Double your wins if your guess is correct. The game ends if your guess is wrong



Win Rules Encouraging Higher Play

MIN. PLAY	JACKPOT
25	100%

Odds Table



Line Chart



5. (Game 2) Hercules



Main Game

- Hercules is a 5 Reels & 25 Liners game.
- Synd

can substitute for all symbols except












, and



symbols.

Feature

Labours of Heracles

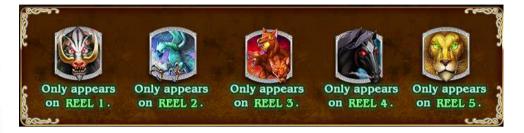

3 or more feature symbols in a game will trigger **Labours of Hercules** feature and there is a chance to win the **Jackpot 1**.

The strength of Heracles



When a player misses the 3rd Scatter symbol in a game, there is a chance to trigger "The strength of Hercules" feature to replace the 5th reel with the Scatter symbol.

Scatter Game



- symbols in a game will trigger The Choice of Hercules
- A player can select either BONUS GAME or FREE GAME in The Choice of Hercules

Bonus Game

Mission: Lernaean Hydra





- There are 3 stages in the BONUS GAME
- Hit & Win the score directly.
- Hit Hydra to double your win and enter to the next stage!
- The **BONUS GAME** ends when EXIT is hit

LEGENDARY TRIO

Free Game

Venus Help





- Select FREE GAME to enter the FREE GAME and 5 free spins will be awarded
- In each free spin, it must indude

one whole reel WILD



in a

game. If there is another whole reel WILD appears in a game, 2 whole reels WILD will be

combined to



in the next

free spin. If one more whole reel WILD appears in a game, 3 whole reels WILD will be

combined to



in the

next free spin

 The whole reel WILD will move randomly in each free spin.

Double Game



- After winning in a game, a player can press [DOUBLE] button to play Double Game.
- Press [START] button to select Hercules or Hydra.
- Double the wins if guess right. The game ends if guess wrong



Win Rules

Encouraging Higher Play

MIN. PLAY	JACKPOT
25	100%

Odds Table





