MEGA LINK 7 IN 1

SERVER USER MANUAL



INDEX

(A)	Jackpot Introduction	3
(B)	Game Server	4
(C)	Link Board	5
(D)	Diagram	6
(E)	Page Period and Page Grand	8
(F)	Menu Instruction	10
	– Menu Screen	11
(G)	Precautions	17

(A) Jackpot introduction

This machine has 3 jackpots:

- 1. Grand Jackpot
- 2. Major Jackpot
- 3. Minor Jackpot






(B) Game Server


- 1. The connection is as shown below.
- 2. The second screen: Shows the jackpot.

The main screen: Shows the accounts and settings.

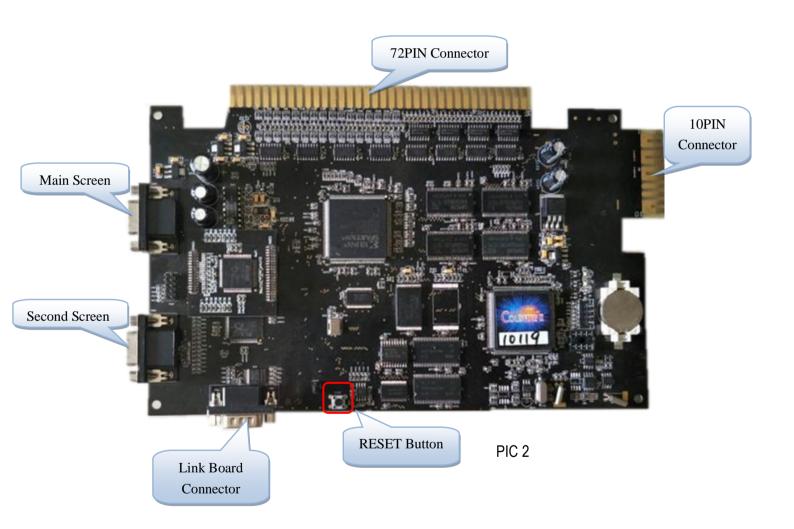

SIZE=25.3cm*16cm

(C) Server Accessories:

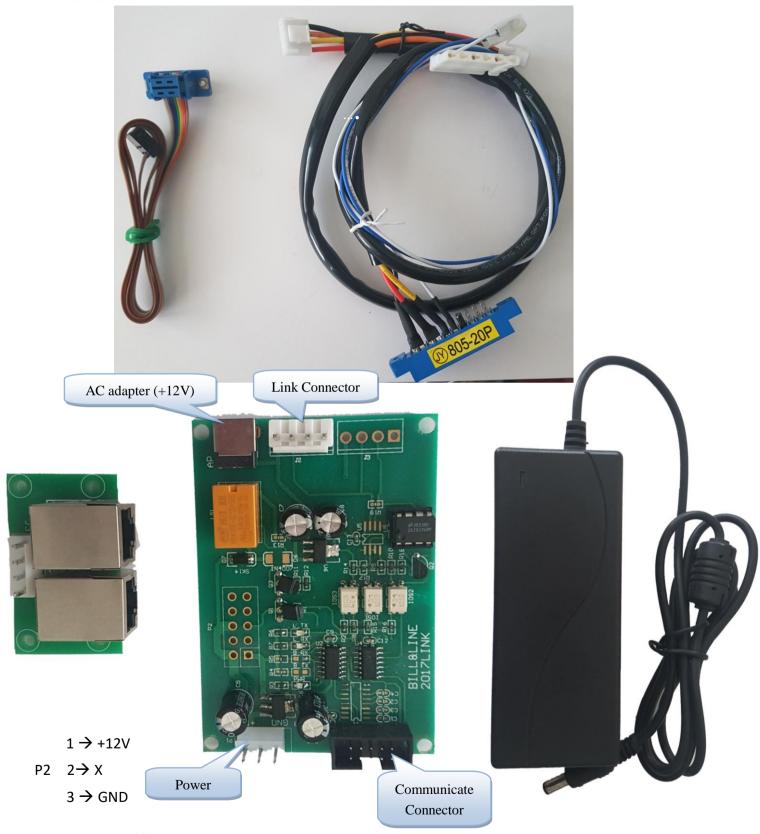

***Notice: When link with 8 sets or more single boards, please get 2 AC adapter.,


(Put one in the first, and one in the middle.)

(D) Diagram

72 PIN Connector					
PIN	Parts surface A	Solder side B			
1					
2	SPEAKER L	GND			
3	SPEAKER R	GND			
4	HOLD1 SW (1)				
5	HOLD 2 SW (2)				
6	HOLD 3 SW (3)				
7	HOLD 4 SW (4)				
8	HOLD 5 SW (5)				
9	START SW				
10	BET SW				
11					
12					
13					
14					
15					
16					
17					
18					
19					
20		SETUP SW			
21					
22					
23					
24					
25					
26					
27					
28					
29					
30					
31					
32					
33					
34					
35					
36	GND	GND			

10 PIN Connector					
PIN	Parts surface <i>C</i>	Solder side D			
1	GND	GND			
2	GND	GND			
3	+5v	+5v			
4	+5v	+5v			
5	+12v	+12v			
6	+12v	+12v			
7					
8					
9	GND	GND			
10	GND	GND			

*** Please adjust the voltage to 5V~5.25V.

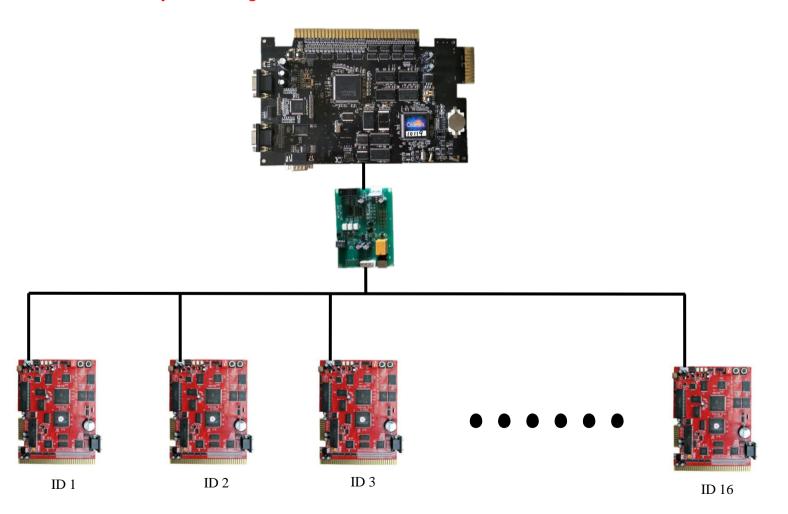

When the game is playing, these two LED will blink staggered. If the two lights don't blink staggered, it means there are some problems in link.


(E) Page Period and Page Grand

1. PAGE PERIOD



- ♦ Push 【SETUP】 to enter the PAGE PERIOD
- ♦ Push 【HOLD 1】 to PAGE GRAND
- ♦ Push 【HOLD 2】 to enter MENU
- ♦ Push 【START】 to EXIT
- ♦ Push 3 sec 【BET】 to CLEAR

2. PAGE GRAND

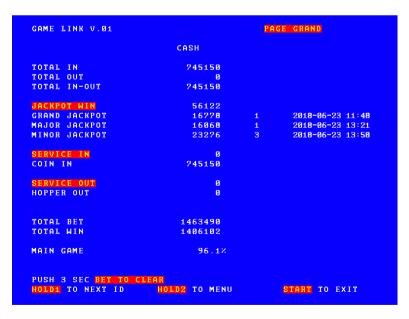

- ♦ Push 【HOLD 1】 to NEXT ID
- ♦ Push 【HOLD 2】 to MENU
- ♦ Push 【START 】 to EXIT
- ♦ Push 3 sec 【BET】 to CLEAR

3. ID=___



- Push 【HOLD 1】 to NEXT ID
- ♦ Push 【HOLD 2】 to MENU
- ♦ Push 【START】 to EXIT

(F) Menu Instruction

> ENTER PASSWORD: Default: 3.3.3.3.3.



- ♦ Push 【HOLD 1】 to change password
- ♦ Push 【HOLD 2】 to enter MENU
- ♦ Push 【START】 to EXIT
- Default Password: 3.3.3.3.3.3 (Changeable)
- Permanent Password: 1.3.5.4.2.3 (Unchangeable)

MENU:



- PREFENCES Adjust the jackpot and probability
- **♦ PERIOD ACCOUNTING**
- **♦ PROTOCOL LIST**
- **♦ EVENTS**
- **♦ VOLUME SETUP**
- **♦ CLOCK SETUP**
- **♦ TEST**
- ♦ RESET ALL MACHINES .
- **♦ CLEAR USER ACCOUNTING**

1. PREFENCES



- (1) The probability is at the right side of the picture above. Every single ID can adjust alone.
- (2) The probability of each ID is suggested to adjust by SERVER.
- (3) When the game start, the function of HOLD5 will be invalid. The function can only use in the initial state.
- (4) Adjust steps: Max Connects → Min Bet for Half Bonus → Min Bet for All Bonus → Server Main Game → Max Bonus → Min Bonus

XThe adjustable value in Prefences:

Max Connects	4.6.8. <u>10</u> .12.14.15.16				
Grand Min Bonus	2268-505440 * The value will change w				
Major Min Bonus	1512-379080	Bet for Half Bonus, Min Bet for			
Minor Min Bonus	756-210600	All Bonus, Max Bonus.			
Grand Max Bonus	5400-972000	* The value will change with Min			
Major Max Bonus	3600-729000	Bet for Half Bonus, Min Bet for			
Minor Max Bonus	1800-405000	All Bonus.			
Bet Add To Bonus	High. Middle. Low. Lowest				
Grand 1/1000	5.4.3.3	* Change and another the with			
Major 1/1000	6.5.4.3	* Change automatically with			
Minor 1/1000	7.6.5.4	Bet Add To Bonus.			
Min Bet for Half Bonus	9.18.27.36. 45 .90.180.360				
Min Bet for All Bonus	us 18.27.36.45. 90 .180.360.810				
Easy play mode	Yes, No				
Mascot code	0, 1				
Server Main Game 83, 86, 89, 92, 95, <u>98</u>					

2. **PERIOD ACCOUNTING**

GAME	LINK V.01				PERIOD	ACCOUNTING
ITEM	YYYY-MM-DD	HH:MM	IN	OUT	JACKPOT	IN-OUT
Ø	2018-06-22	14:41	745150	Ø	56122	745150
	DOWN LINE		HOLDS DOWN P			
HOLD2	UP LINE		HOLD4 UP PAGI	E	START	O EXIT


- Push [HOLD 1] DOWN LINE
- ♦ Push 【HOLD 2】 UP LINE
- ♦ Push 【HOLD 3】 DOWN PAGE
- ♦ Push 【HOLD 4】 UP PAGE
- ♦ Push 【START】 to EXIT

3. PROTOCOL LIST



- ♦ Push 【HOLD 1】 DOWN LINE
- ♦ Push 【HOLD 2】 UP LINE
- ♦ Push 【HOLD 3 】 DOWN PAGE
- ♦ Push 【HOLD 4】 UP PAGE
- ♦ Push 【START】 to EXIT

4. **EVENTS**

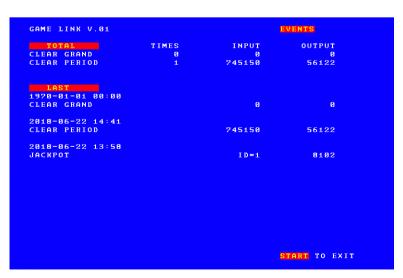


♦ Push 【START】 to EXIT

5. **VOLUME SETUP**




- ♦ Push 【HOLD 1】 MORE
- ♦ Push 【HOLD 2】 LESS
- ♦ Push 【START】 to EXIT

6. CLOCK SETUP

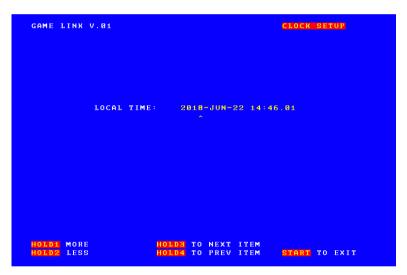


- ♦ Push 【HOLD 1】 MORE
- ♦ Push 【HOLD 2】 LESS
- ♦ Push 【HOLD 3】 TO NEXT ITEM
- ♦ Push 【HOLD 4】 TO PREV ITEM
- ♦ Push 【START 】 to EXIT

7. **TEST**

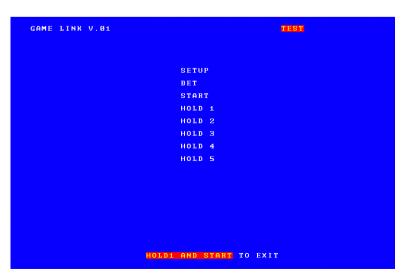

♦ Push 【HOLD 1】 + 【START】 to EXIT


8. **RESET ALL MACHINES**

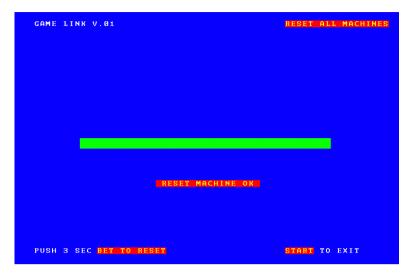

- (1) Please reset each ID before the RESET ALL MACHINES.
- (2) Enter the SERVER MENU, choose RESET

 ALL MACHINES.
- (3) Push 3 sec 【BET】 to RESET
- (4) Push 【START】 to EXIT

9. CLEAR USER ACCOUNTING

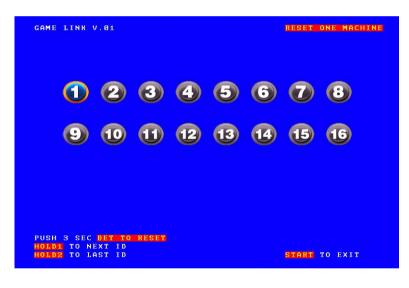

- (1) Clear the ID account first
- (2) Enter the SERVER MENU, choose the ID number you have cleared.
- (3) Doing the action: CLEAR USER

 ACCOUNTING.
- (4) Push 3 sec 【BET】 to RESET
- (5) Push 【HOLD 1】 to NEXT ID
- (6) Push 【HOLD 2】 to LAST ID
- (7) Push 【START】 to EXIT

ID Number Adjust


ID Number	On / Off Switch				
	1	2	3	4	
ID 1	OFF	OFF	OFF	OFF	
ID 2	ON	OFF	OFF	OFF	
ID 3	OFF	ON	OFF	OFF	
ID 4	ON	ON	OFF	OFF	
ID 5	OFF	OFF	ON	OFF	
ID 6	ON	OFF	ON	OFF	
ID 7	OFF	ON	ON	OFF	
ID 8	ON	ON	ON	OFF	
ID 9	OFF	OFF	OFF	ON	
ID 10	ON	OFF	OFF	ON	
ID 11	OFF	ON	OFF	ON	
ID 12	ON	ON	OFF	ON	
ID 13	OFF	OFF	ON	ON	
ID 14	ON	OFF	ON	ON	
ID 15	OFF	ON	ON	ON	
ID 16	ON	ON	ON	ON	

(G) Precautions

- 1. The SERVER set the max jackpot before set the min jackpot. We suggest that the value is set by 30%-40%, you can adjust by your own.
- 2. When FREE GAME is playing, you will not be able to get the jackpot.
- 3. Only when you bet to the setting value, you can get the jackpot.

The times of offline



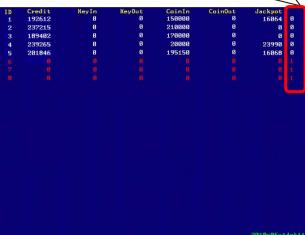

SECOND SCREEN

MAIN SCREEN

- 4. When the times of offline are more than 3 times, means the ID is offline usually, you have to check the status of link.
- 5. If the times of offline are more than 5 times, push the Reset button on the SERVER.